

Skin Remover

SR360 MANUAL



O How To Use

- · Turned OFF the power switch and valve for water supply.
- · Connect the power source, water (When used) and compressed air.
- · Open the valve of input port to be used.
- · Adjust the distance of a sensor and timer. (In the electric box).
- Operate the machine for peeling after putting the vegetables into the inlet.
- · Turn off the power switch after operation.

** It is recommendable that the air supply and pressure will be set as high as possible within the range of 9kg/cm², as it will generate more peeling power

O If The Peeling Power Falls

- · Check and change the air pressure(5~6kg/cm²) and supply flow rate.
- · Check the foreign materials in the interior of suction device
- · Make the air hose shorter and install the air auxiliary tank.
- · Check water supply.

Precautions (For Safety)

- · Ensure no shaking by fixing the outlet hose.
- · Fix the 4 points of bracket not to move.
- · Do not access the hose of outlet during operation.
- · Turn off the valve when not using water.
- · Be careful of short circuit and electric shock.

Setting Of Timer And Sensor

Installation

- Fix 4 points of bracket with bolts in main body considering the working height.
- · Insert the hose into the outlet and fix with a hose band.
- · Fix the outlet hose not to move.





Timer Setting

Clockwise+

Counter-Clockwise -

Sensor Setting

Adjust/set the distance and sensitivity by turning the pin.

Specifications

Main Body	Weight	Power Source	Inner Diameter Of Large Inlet	Inner Diameter Of Small Inlet
560x670x300	10kg	Air Compressor(3-Phase, 380V) Electricity : AC 220V, 60Hz	Ø40	Ø25